




SUPERIOR

SAUNA & STEAM

MOD POD 6 ATHLETIC BENCHING ASSEMBLY INSTRUCTIONS

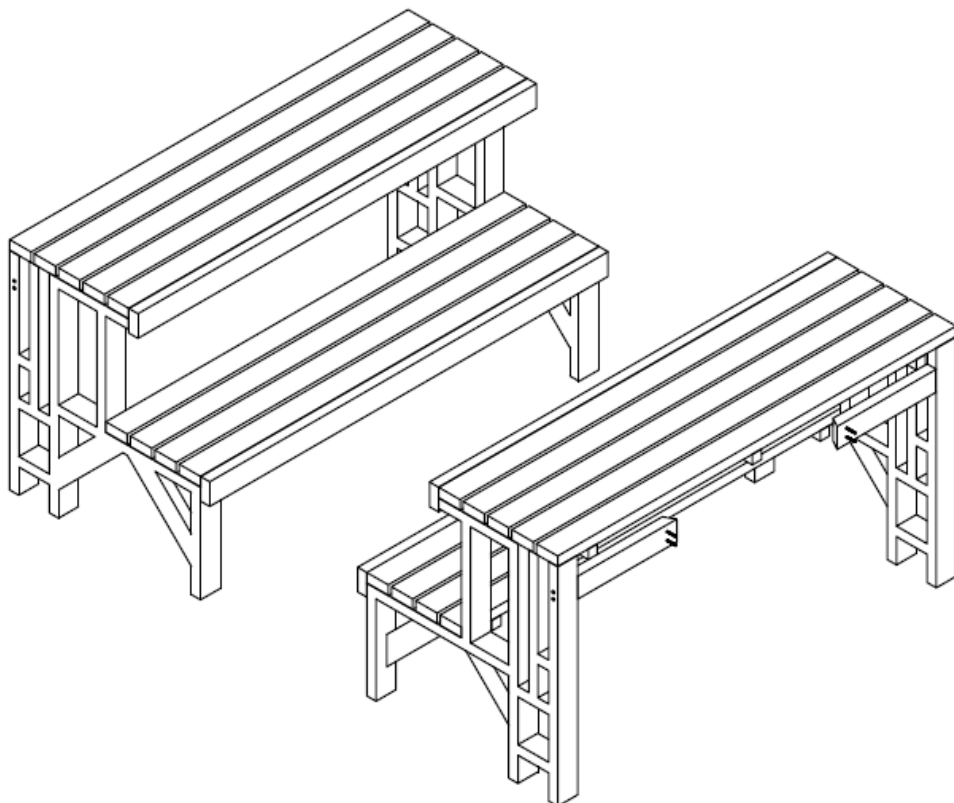


SuperiorSaunas.com | info@superiorsaunas.com | (877) 872-2806

TOOLS & NOTES

REQUIRED TOOLS

- T25 TORX BIT - INCLUDED



RECOMMENDED TOOLS

- IMPACT DRIVER
- LONG LEVEL

SAFETY NOTES


SOME PARTS OF THE SAUNA BENCHES ARE HEAVY. TAKE CARE WHEN LIFTING AND BRINGING THE BENCHES INTO THE SAUNA.

FOR ASSISTANCE YOU CAN CONTACT US:
info@superiorsaunas.com | (877) 872-2806

ASSEMBLY INSTRUCTIONS


STEP 1

THE FOUR BENCH SUPPORTS WILL NEED TO HAVE THEIR CROSS SUPPORTS ATTACHED. THE BENCH SUPPORTS HAVE HOLES PRE-DRILLED AND ARE NUMBERED TO MATCH A CORRESPONDING NUMBERED CROSS SUPPORT. THERE ARE TWO LEFT AND TWO RIGHT BENCH SUPPORTS.

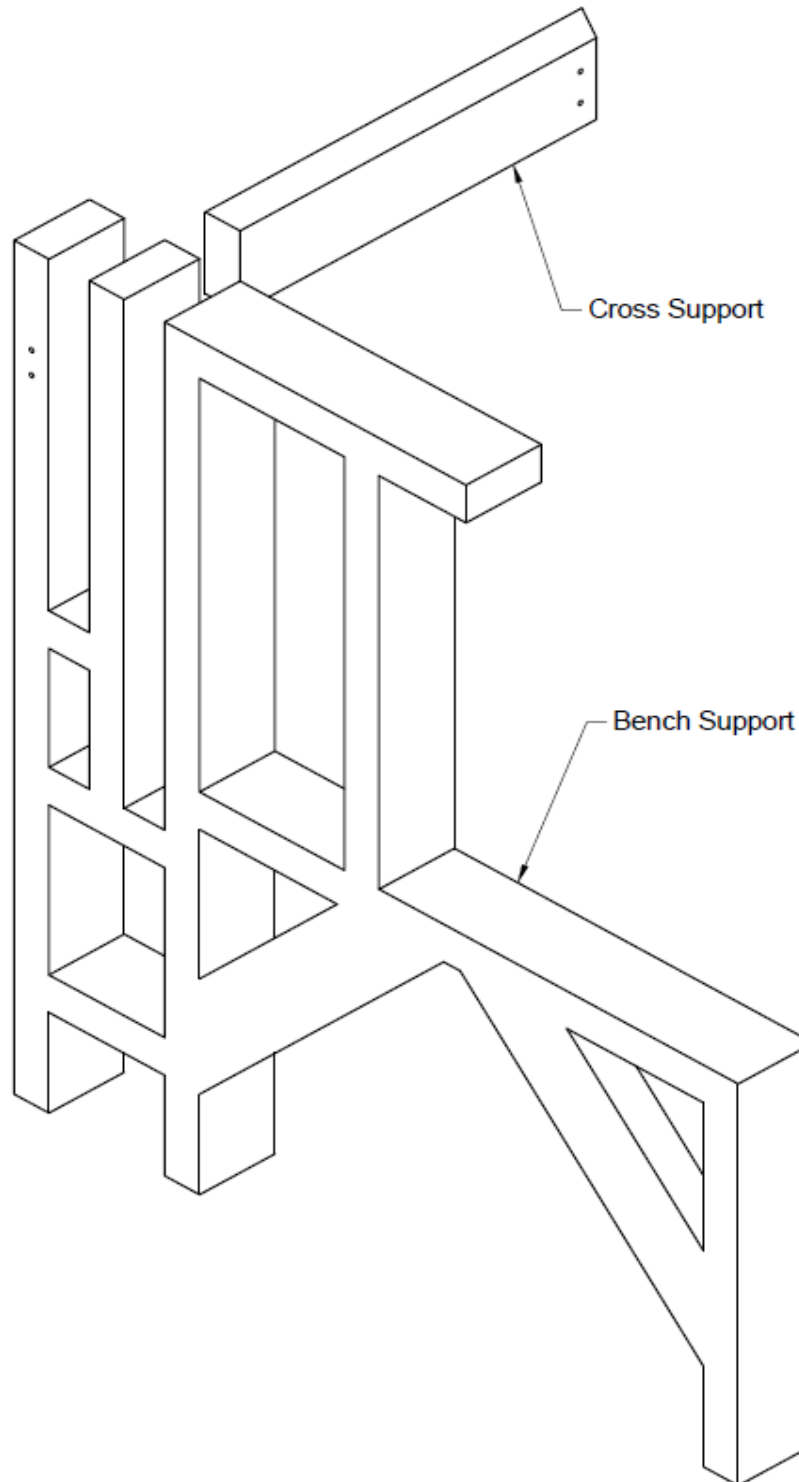


STEP 2

SCREW THE TWO 5" SCREWS THROUGH THE BENCH SUPPORT INTO THE CROSS SUPPORT USING THE T25 TORX BIT. MAKE SURE THE CROSS SUPPORT HAS THE ANGLE FACING THE FRONT OF THE SUPPORT. DO THIS FOR EACH BENCH SUPPORT.

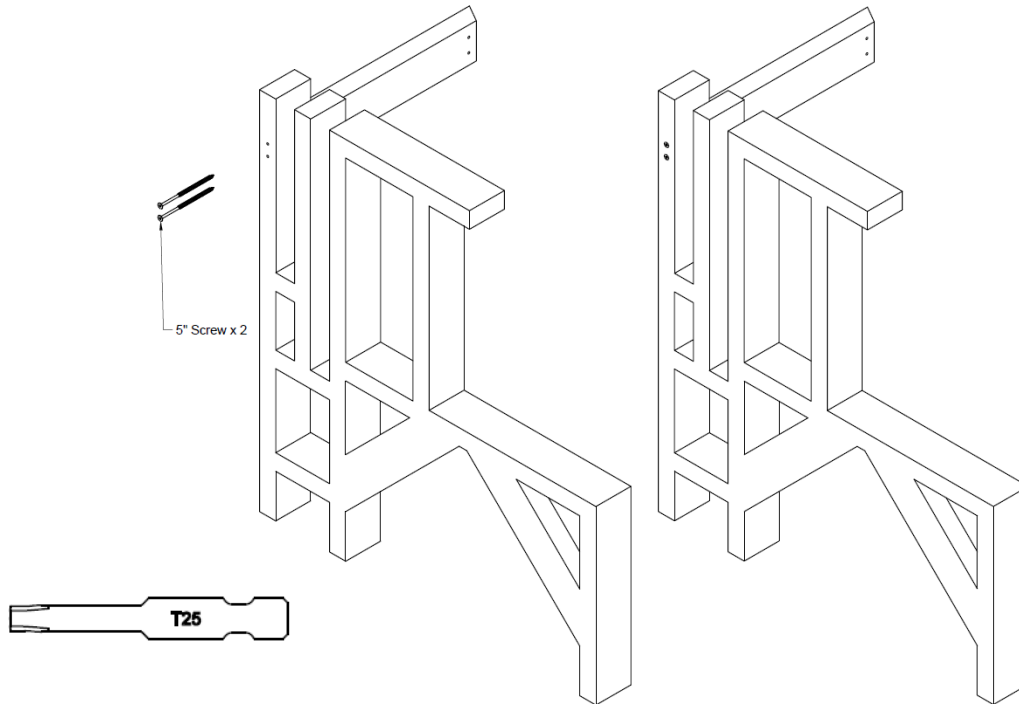


STEP 3

POSITION A LEFT AND A RIGHT BENCH SUPPORT INTO THE CORNERS ON THE LEFT SIDE OF THE SAUNA.

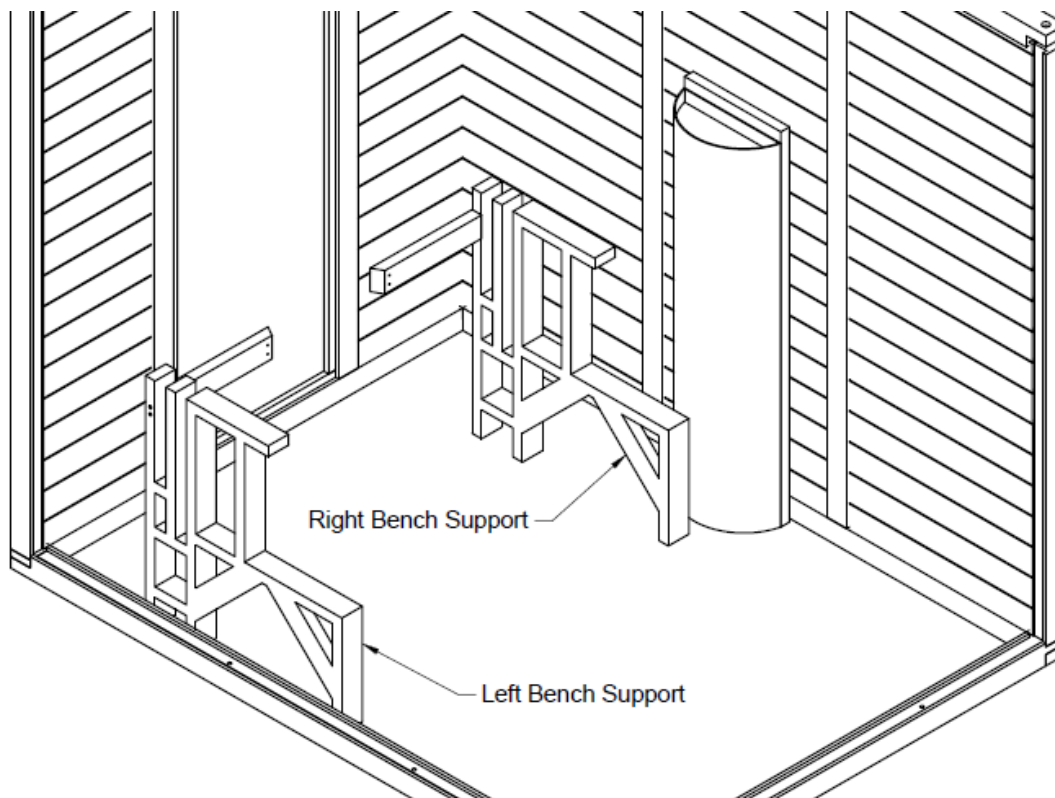


STEP 4

PLACE A BOTTOM BENCH ONTO THE SUPPORTS. USING A LEVEL, ADJUST THE LEVELING FEET ON THE SUPPORTS UNTIL THE BENCH IS LEVEL FROM LEFT TO RIGHT AND FRONT TO BACK.

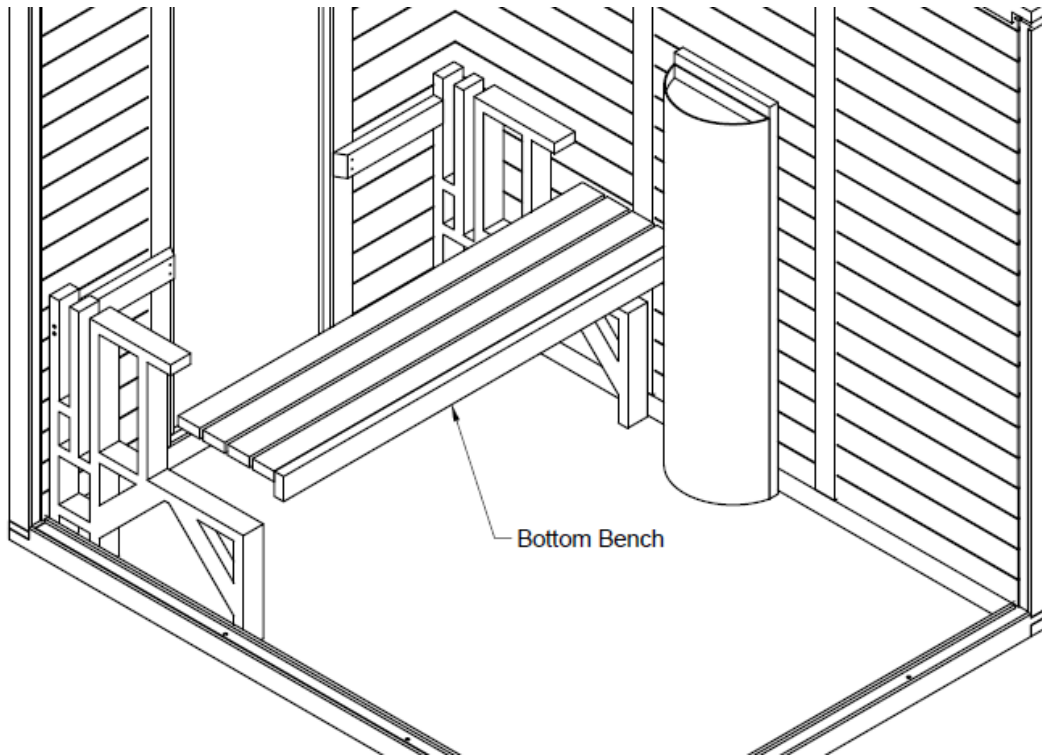


STEP 5

ONCE THE BENCH IS LEVELED, SCREW THE CROSS SUPPORTS INTO THE POSTS USING TWO 3" SCREWS ON EACH SIDE USING THE T25 TORX BIT.

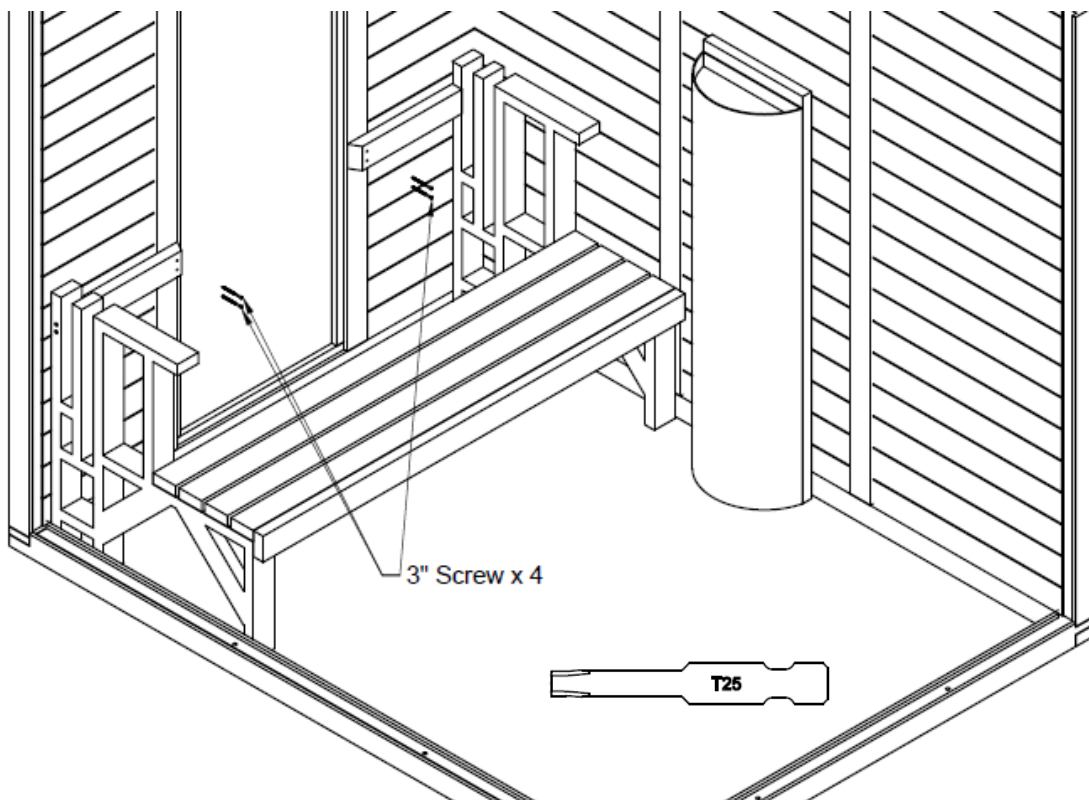


STEP 6

SLIDE A TOP BENCH INTO POSITION.

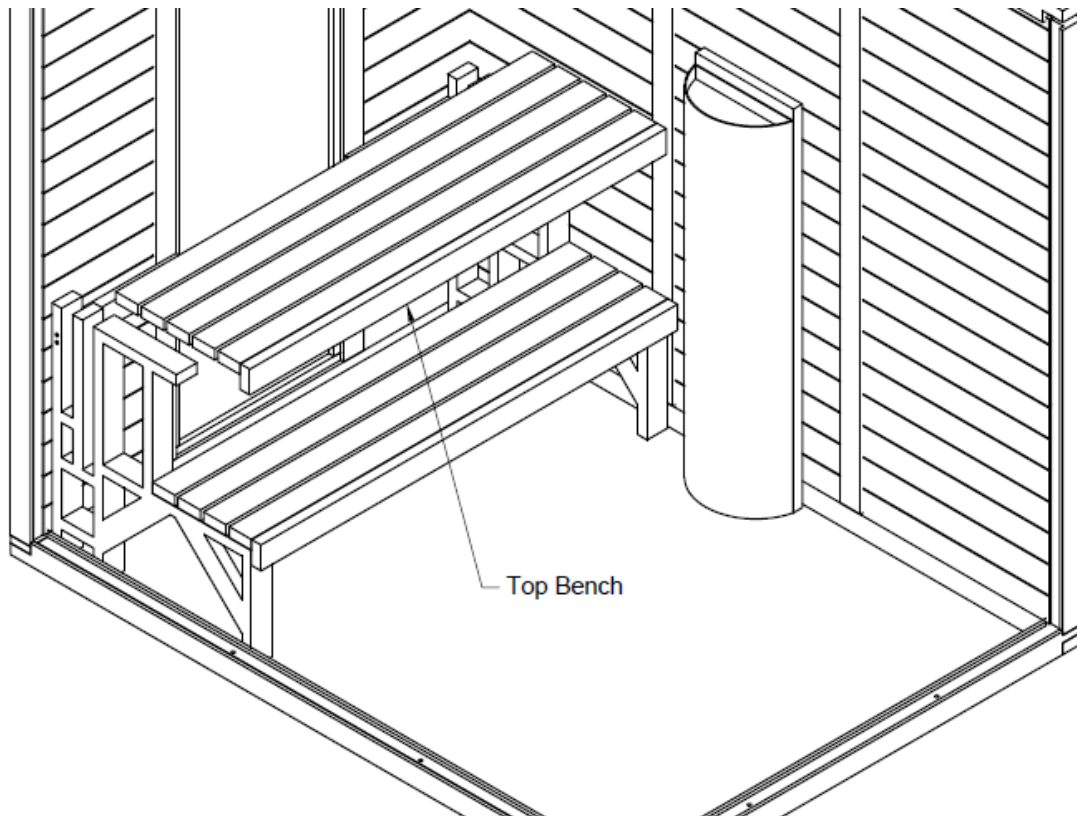


STEP 7

REPEAT THE PROCCES WITH THE RIGHT BENCHES. POSITION A LEFT AND A RIGHT BENCH SUPPORT INTO THE CORNERS ON THE RIGHT SIDE OF THE SAUNA.

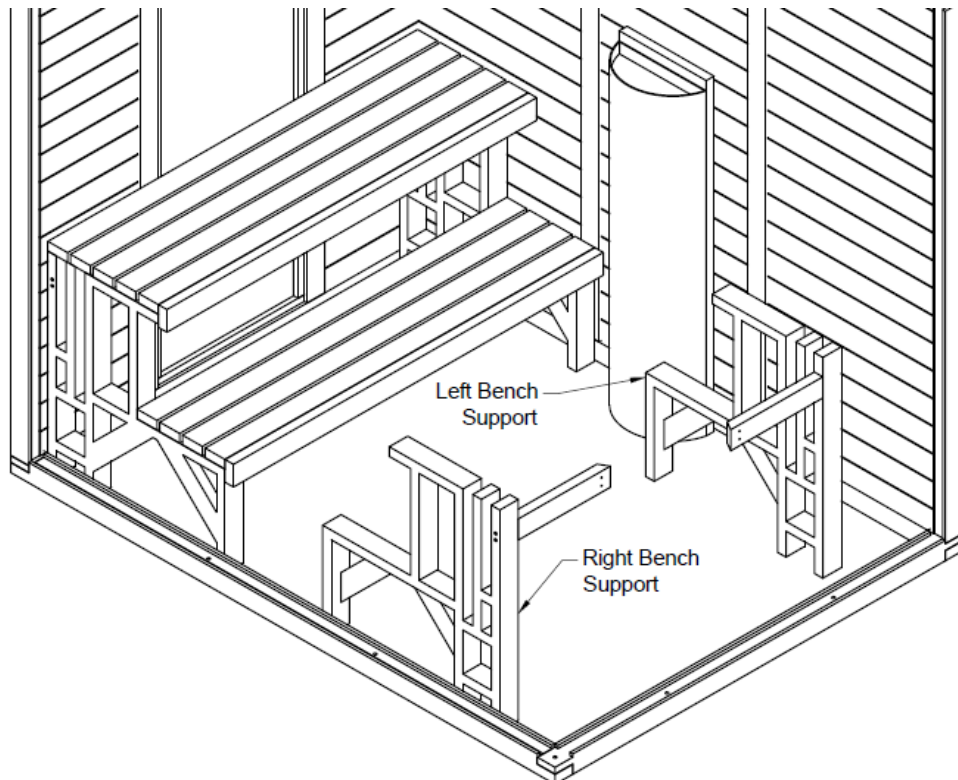


STEP 8

PLACE A BOTTOM BENCH ONTO THE SUPPORTS. USING A LEVEL, ADJUST THE LEVELING FEET ON THE SUPPORTS UNTIL THE BENCH IS LEVEL FROM LEFT TO RIGHT AND FRONT TO BACK.

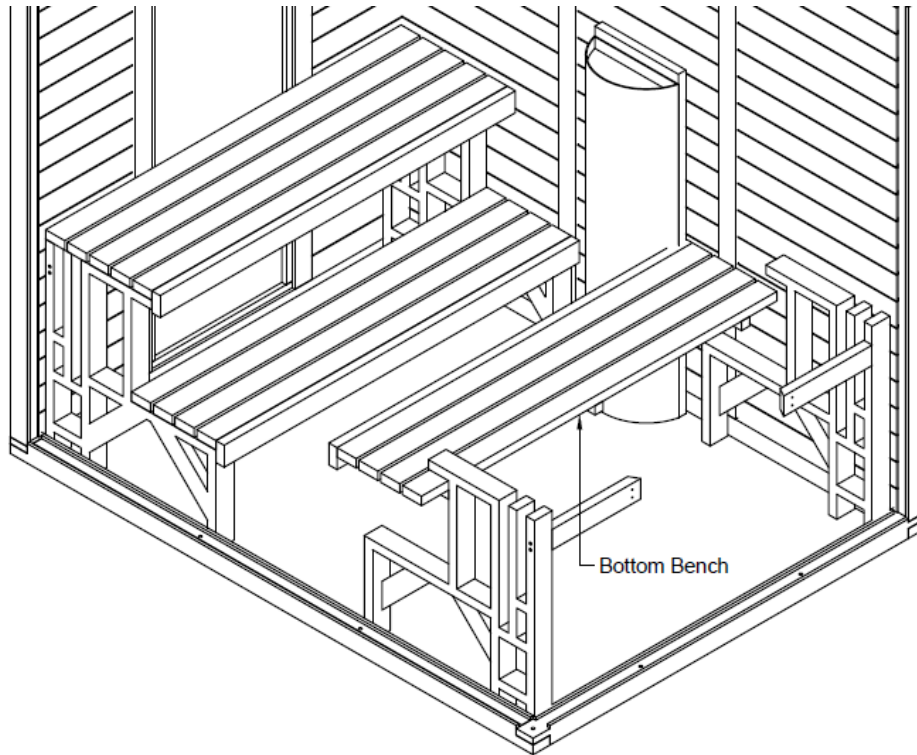


STEP 9

ONCE THE BENCH IS LEVELED, SCREW THE CROSS SUPPORTS INTO THE POSTS USING TWO 3" SCREWS ON EACH SIDE USING THE T25 TORX BIT.

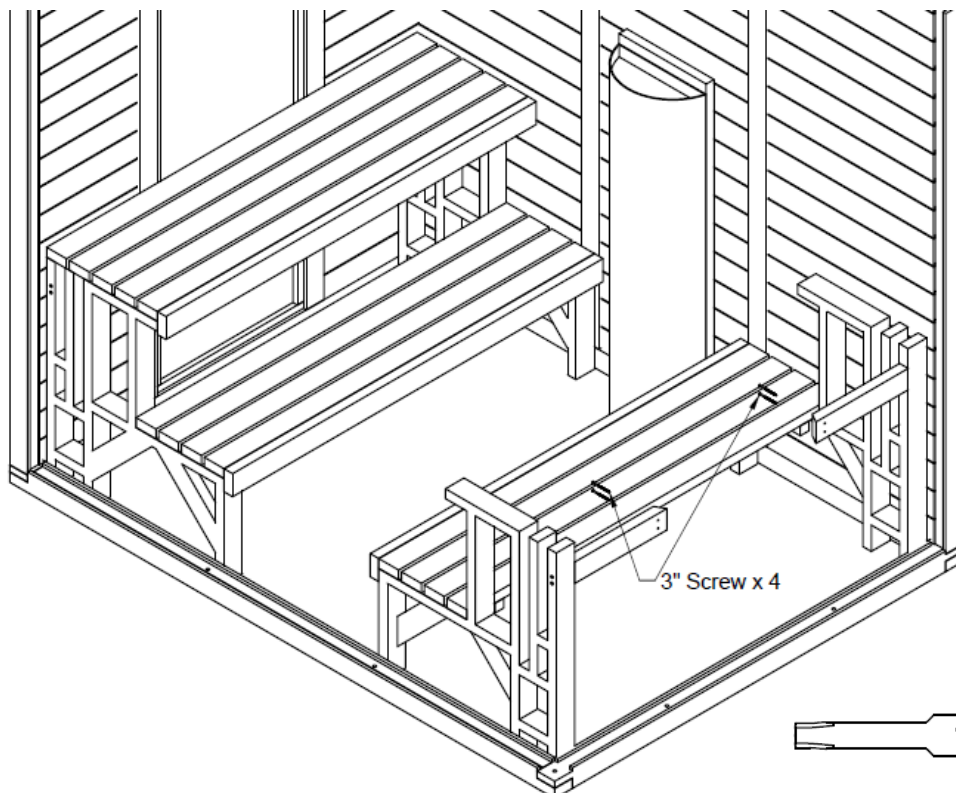


STEP 10

SLIDE A TOP BENCH INTO POSITION.

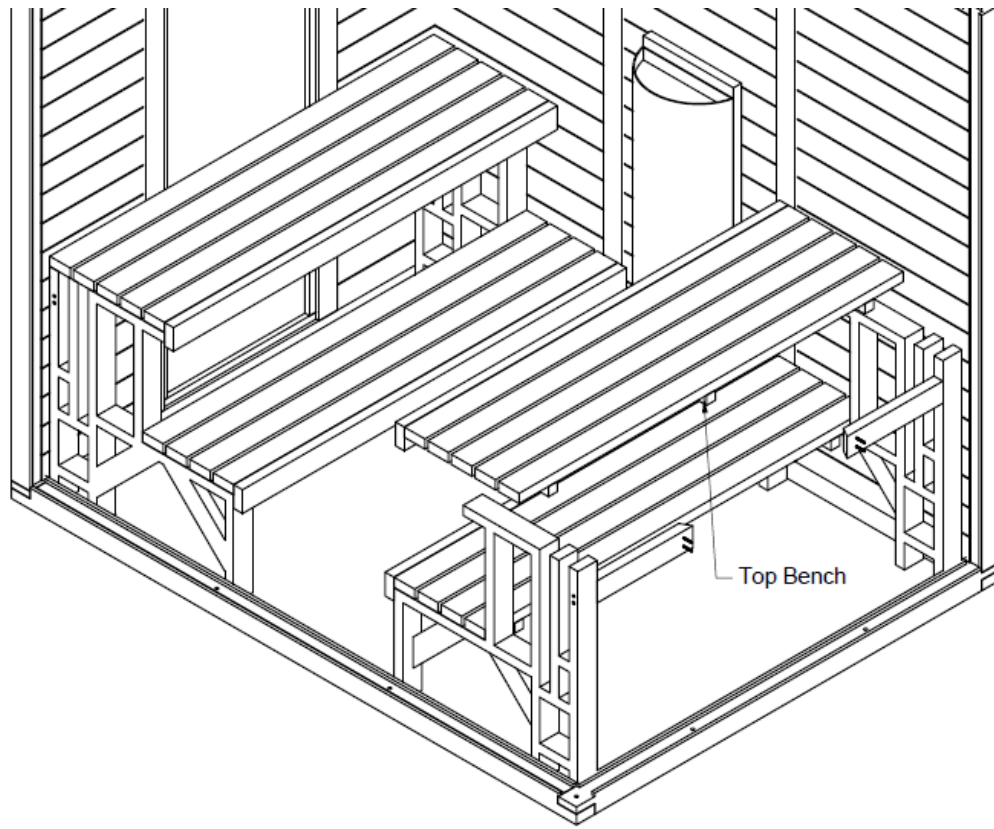



STEP 11


TO STORE THE BENCHES, SLIDE THE TOP BENCH INTO THE FRONT SLOT.

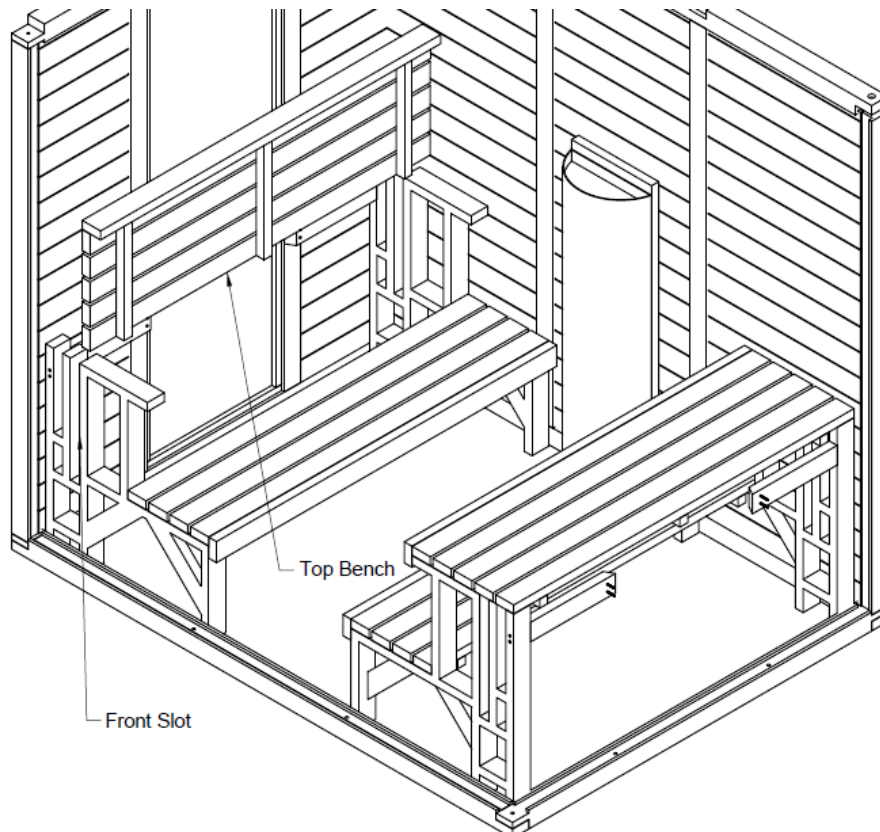

STEP 12

SLIDE THE BOTTOM BENCH INTO THE REAR SLOT. THEN REPEAT ON OTHER SIDE.

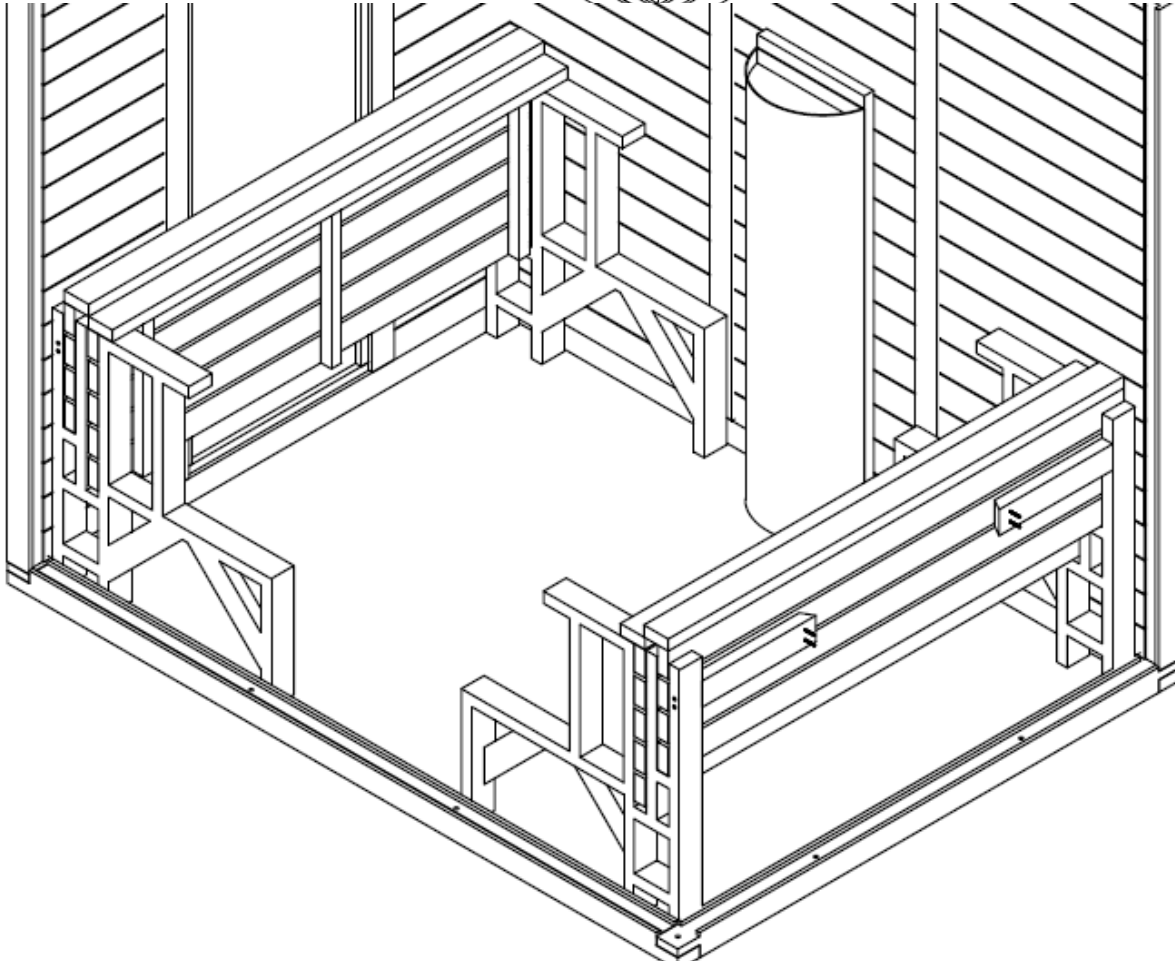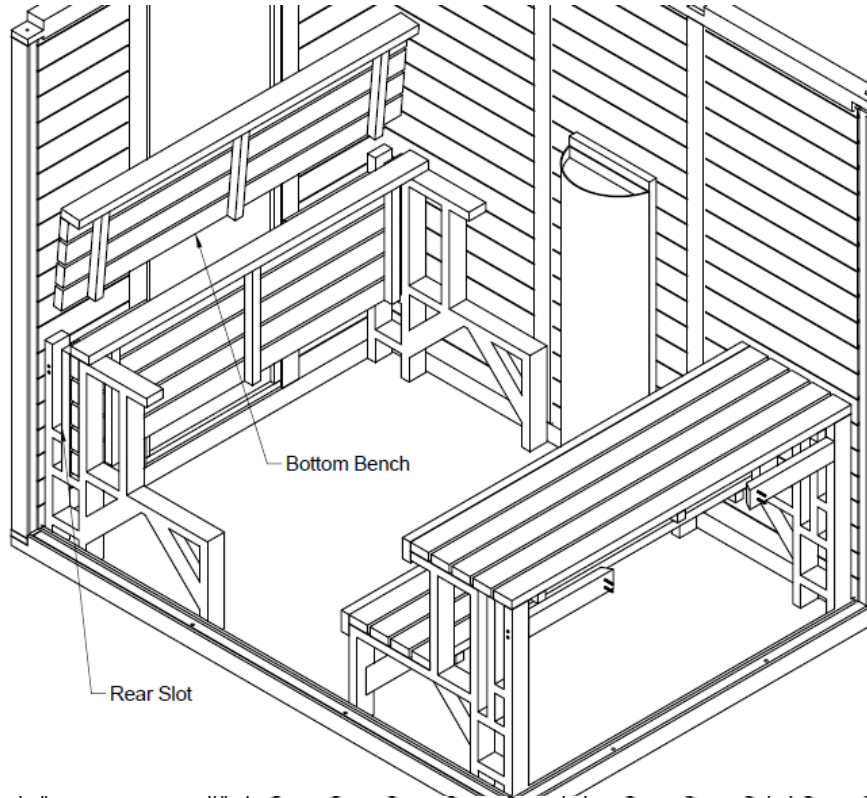

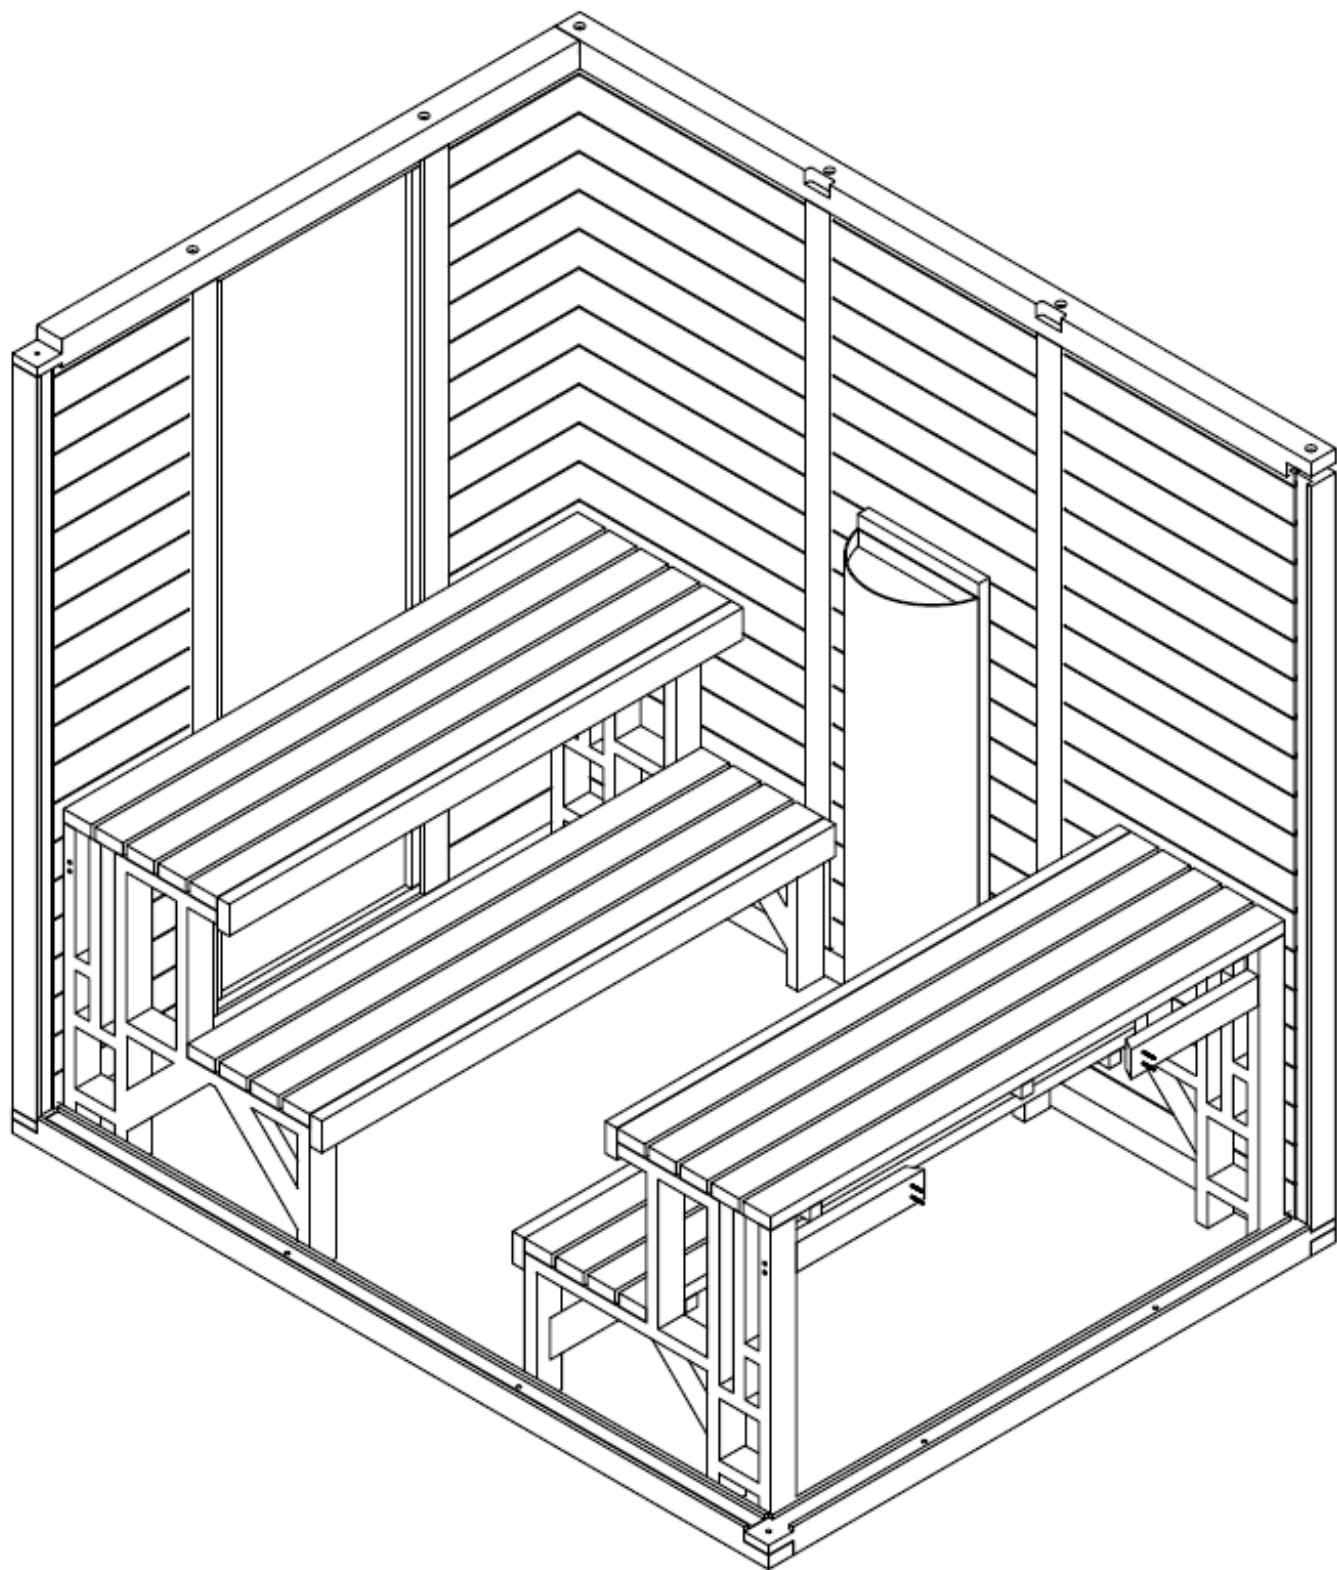

CONTACT US

FEEL FREE TO REACH OUT TO US WITH ANY QUESTIONS OR CONCERNS ABOUT THE INSTALLATION OR USE OF YOUR MOD POD.

EMAIL: info@superiorsaunas.com

**PHONE: (877) 872-2806
M-F 7AM - 5PM CT**